



# AIR NAILER

## Quick Guide

### Safety:

1. Note: nail will not be released unless nozzle is pushed in.
2. Before connecting to air supply, ensure there are no nails loaded in the machine.
3. Use hammer or dremel to flatten any exposed nails.

### Set-Up:

1. Select desired tool and nail length.
2. Unload any nails that may be left in the clip
3. Lower air hose and remove nozzle if necessary.
4. Connect air nailer to compressed air hose.
5. Load desired nails into clip.

### Use:

1. Use clamps to secure material to work station.
2. Push air nailer nozzle into material at desired location, making sure nail will not go through undesired surfaces.
3. Pull trigger to release nail into material.
4. Detach air nailer from hose and reattach original nozzle.
5. Return air nailer and nails to original locaiton.

**For more Wood Shop information, check out the BeAM website here:** <https://beam.unc.edu/wood-shop/>